


Quick start guide for SPE-MG-104

Reference : SPE-MG-104

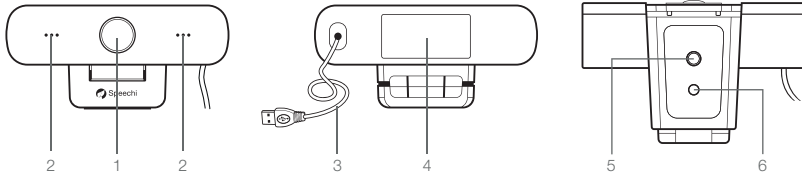

1. Lens (fixed focal length)
2. Audio IN
3. USB 2.0 cable
4. Fixation clamp
5. Screw hole (for tripod)
6. Screw hole (for bracket)

1 Setting up your camera

Option 1: Use the hinged clamp to tighten the edge of the screen.

Option 2: Use a bracket with a ¼" male screw.

2 Camera selection in the software settings

Automatically adjusting the microphone settings

Video Camera Camera SPE-MG-104

Softwares : Skype, Zoom, Hangout...

3 USB connection (2.0)

Plug & play !
Connect the camera's USB 2.0 cable directly to your equipment, no installation required.

4 Technical information about the camera is available on our website.

Support and resources :
<https://www.speechi.net/fr/home/support/camera-pour-visioconference-full-hd-speechi/>

Email :
support@speechi.net